
LED Camera Installation Instructions



Pull down on the upper Playfield leveling spring with the blade of a screwdriver inserted about one third of the way down from the top. Slip the camera mounting plastic over the top of the spring and under the metal bracket.



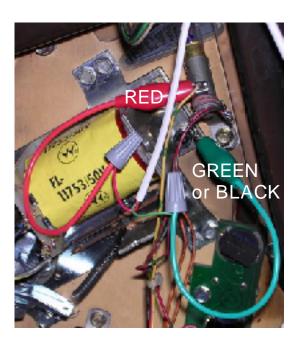

Route the camera wire behind the camera, under the wood upper playfield and behind the post as indicated by the arrow. Put the end of the wire thru a hole in the main playfield located behind the red pop bumper. Raise the playfield for the next step. Capture the balls so they do not fall and damage anything.

If you prefer to solder you can attach the red wire to the yellow striped wire on the camera light and the green or black wire to the diode lead on the single terminal. No connection is made to the pair of red striped wires. If you do not want to solder these connections use the wire nuts to attach the green or black and red alligator leads to the green or black and red wires from the camera. Clip the alligators onto the lamp connections.