


## **Addams Family Train Installation**



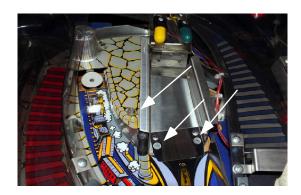

Remove the 8mm nut from the tip of the plastic next to the train target. Also remove the ball ramp to the right by removing two screws as indicated at the entrance to the ramp. locate the hole in the playfield under the plastic and see the wire that comes from the flasher going through it. Install the train's cable connector and cable through this hole.

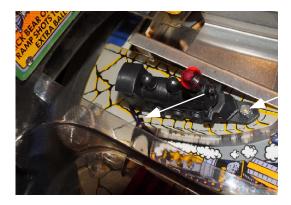

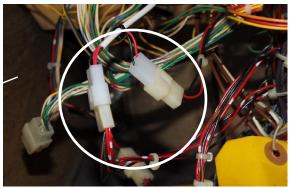

Put the plastic back in place and route the train cable up through the notch by the target. Mount the train with the nut for the plastic using the hole in the front of the train. Reinstall the ball ramp. Pull up the playfield into an upright position. You pull the ball shooter out to clear and lift the playfield up and back onto the rails. Then pull until it locks forward and rotate vertical (block the balls in the shooter trough with a finger until the playfield is tilted back to the backbox). Locate the 3 pin wide connector that goes to the train flasher and the train cable that all comes through the hole under the train. Seperate the flasher connectors and insert them on the mating train cable connectors. Lower the playfield and close up the base cabinet. The red stack on the train will flash with the game flasher and the head lamp will glow steady for a few seconds each time the flasher is activated.